


# Align Attributes

## AutoCAD Electrical 2019

This command aligns attributes from multiple components on either the same horizontal or vertical axis. This command is available on the Cadline Localiser and is not available as part of the default installation of AutoCAD Electrical.

As an example, the attributes to the left of the yellow line in the picture below are not on the same vertical displacement.

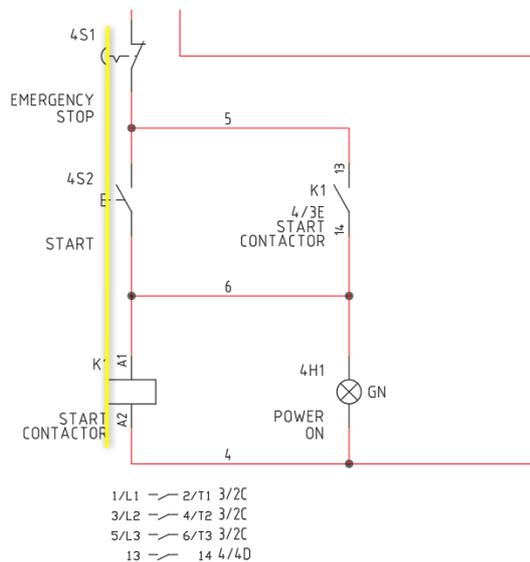

Select *eXtras* ribbon tab > *Components* panel >  *Align Attributes*


The command line will show:

Select Attribute to align with (Horizontal/<Vertical>):

Type H or V dependent upon your requirements to align horizontally or vertically


Select Attribute to align with (Horizontal/<Vertical>):

Select the “master” attribute that you want all other attributes selected to align to on one of the symbols

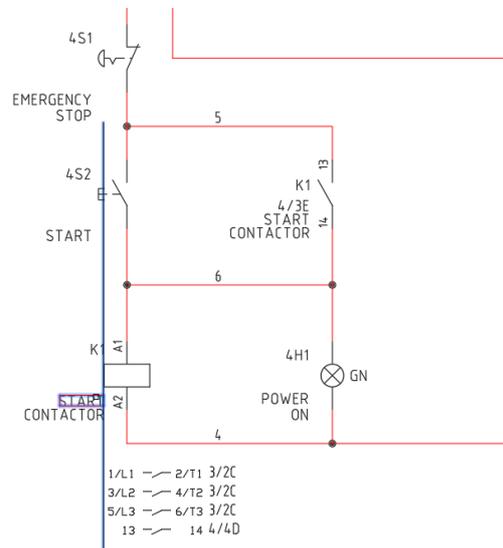

Select Attributes to align:

Select all attributes you want aligning with the “master”. You must pick each attribute.

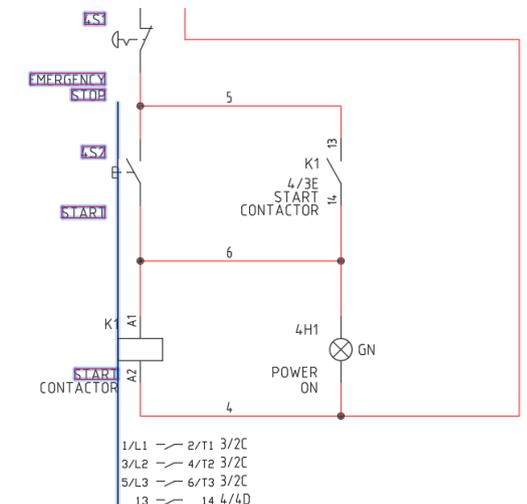

Right click to close off the command

The attributes will be in the same vertical or horizontal displacement