

Revit Server – Client Access


Before you can use Revit Server on the client machines, you need to make sure that the RSN.ini file and Accelerator System Variable has been set.

The RSN.ini file can be copied from the server to the client from the location:


- C:\ProgramData\Autodesk\Revit Server 2019\Config

To add the environment variable:


- From the Windows Control panel, select the System applet.

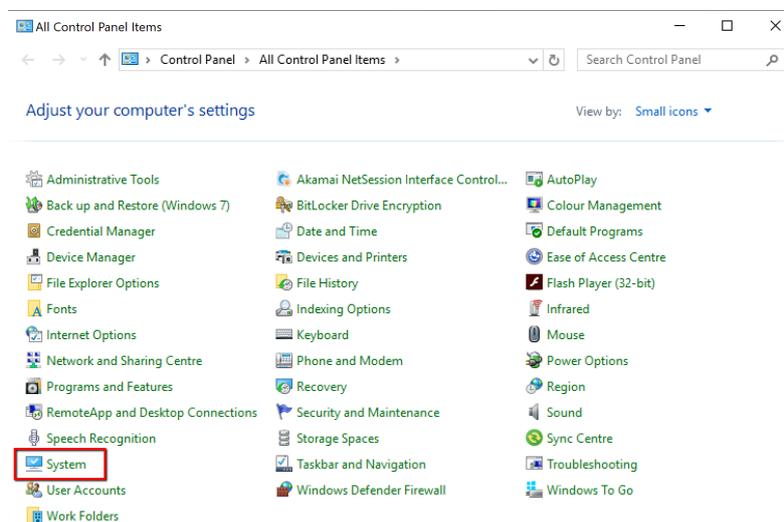


- Select Advanced system settings.

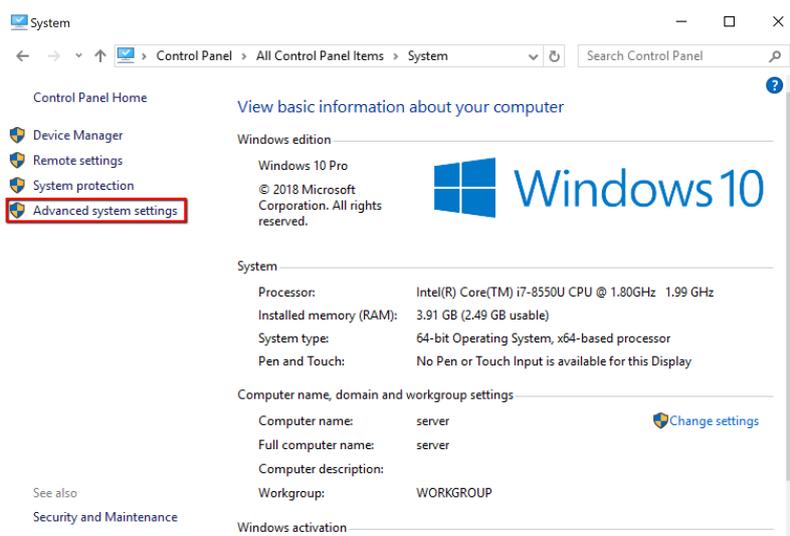

- Select Environment Variables.

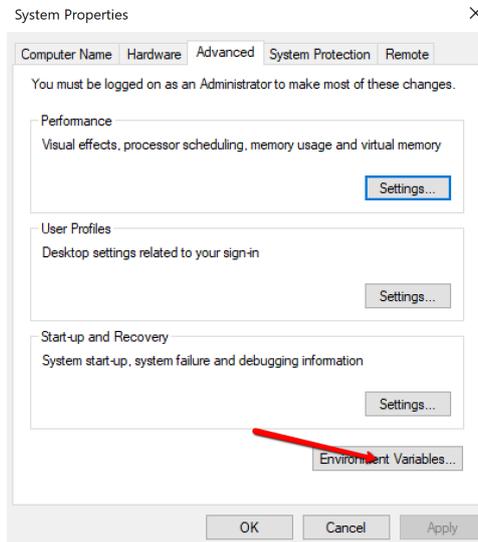

- Under the System variables, select New:
 - o Variable name: RSACCELERATOR2019
 - o Variable value: <ServerName>

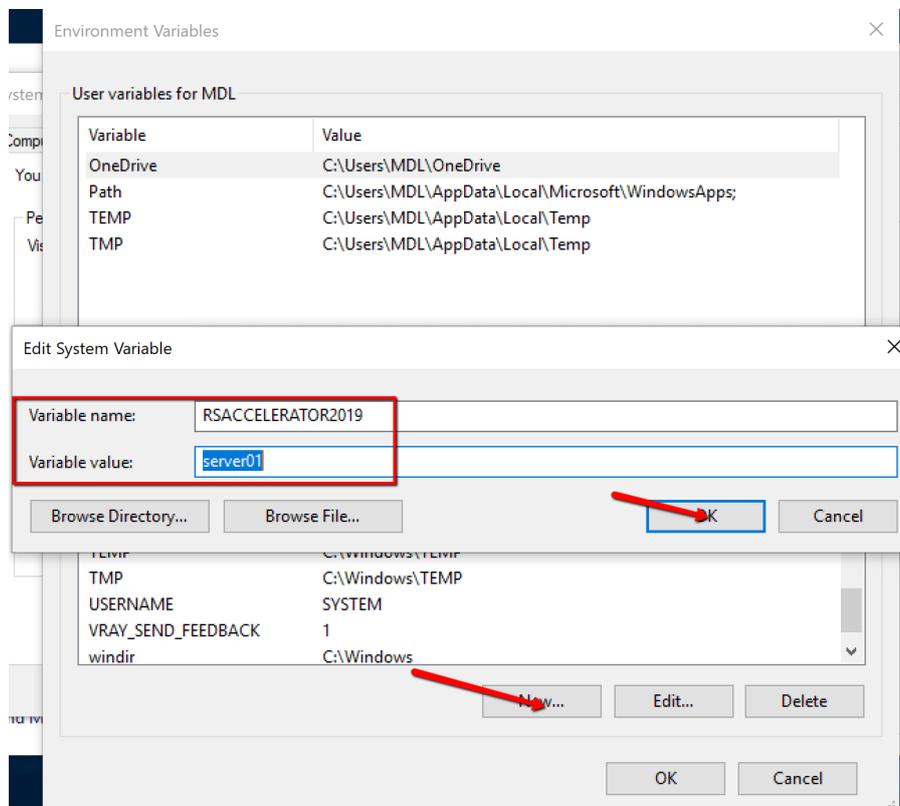

- Select OK, to complete entry.
- You can now start to save your Revit projects into Revit Server.

