



Save the layout data as a drawing. Click on the **'A'** (top left) then click on **Save as** and then **Save Layout as a drawing**. Save the file to the desired location and name the file as required. This has created a copy DWG, but the new file you have just created has no associativity to the original Inventor 3D model.

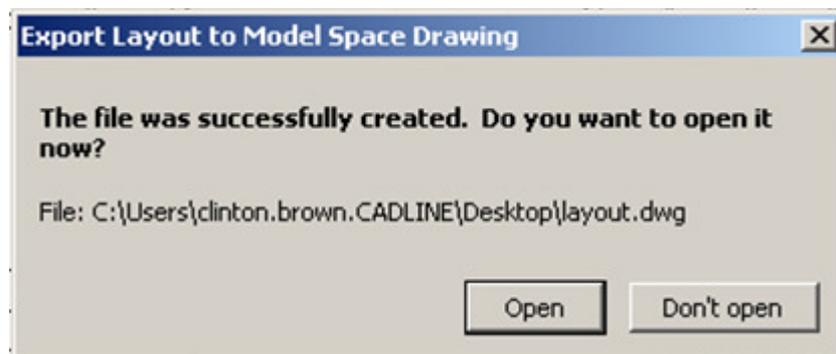

Click **Open**

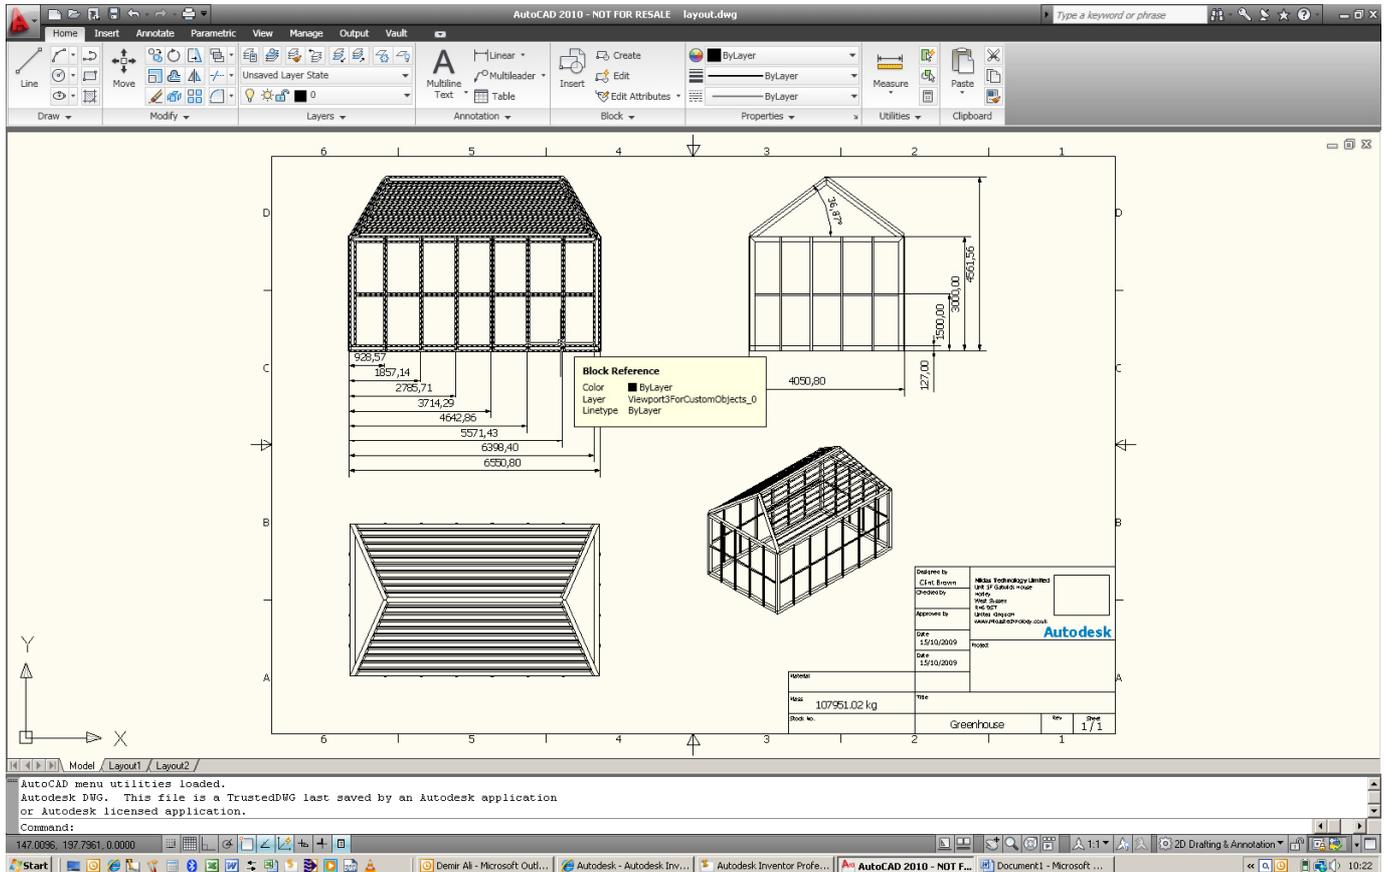

Your drawing is now broken into Blocks, that you can copy and paste into site plans etc. Note that the Inventor Layers have been maintained, and that these can be manipulated as usual in AutoCAD.

Be aware that you are more than likely going to have to re-scale this drawing, as it will have come through scaled to your original paper size.