Guide by Martin Phelps

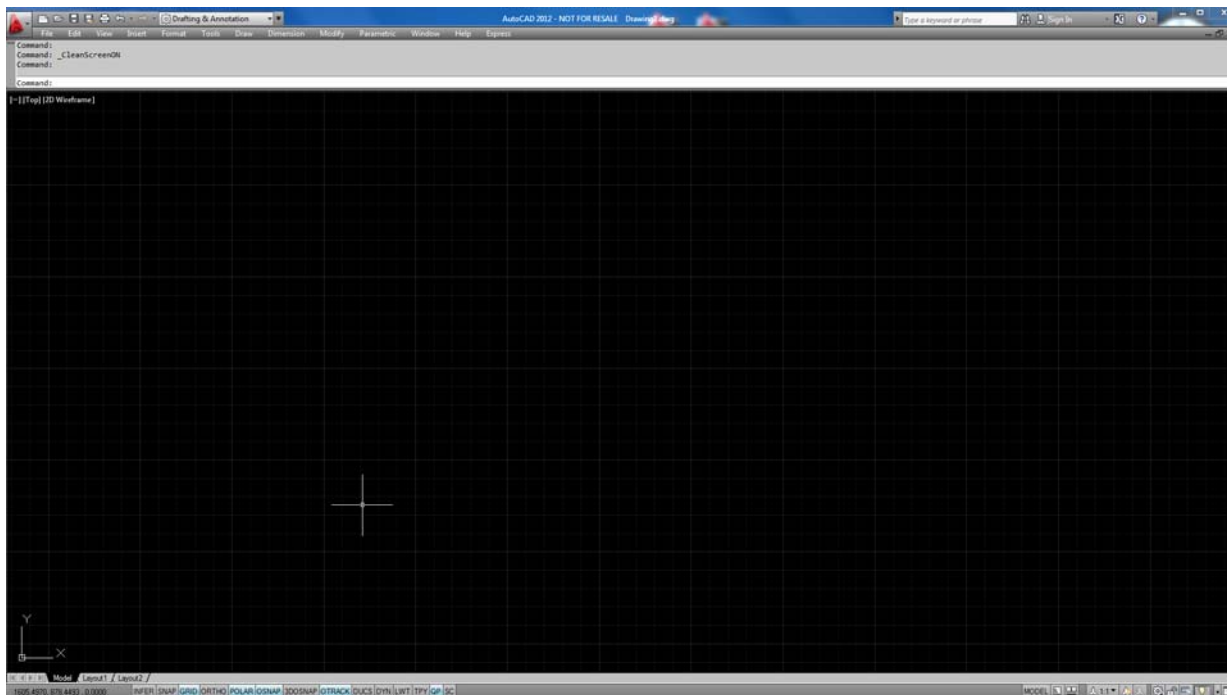Passion Integrity Expertise Teamwork

Clean Screen

AutoCAD Users
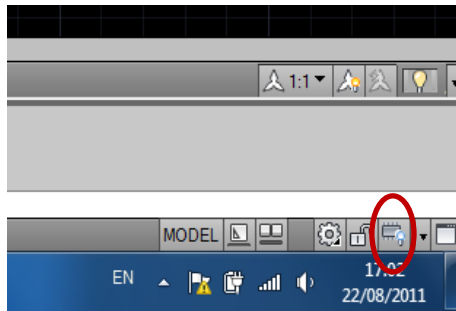
Changing the user interface

Quick Display Tip 9 – Clean Screen

With the Ribbon, a few tool bars and some pallets on the screen the appearance of AutoCAD can be quite cluttered, to de clutter the screen area, press Ctrl+0.

Press Ctrl+0 again and the previous set up is restored.

The Clean Screen command can also be accessed by picking the icon far right of the status line.

This feature can be very useful when discussing a design since more area can be allocated to the drawing.