



elecworks™ Tips & Tricks

Adjusting Individual Wire/Cable Paths Within PTC Creo

After elecworks™ has automatically routed your wires/cables from the schematic data, there may be instances where the wire/cable path doesn't look aesthetically pleasing or when you would prefer an alternative path. As an example:

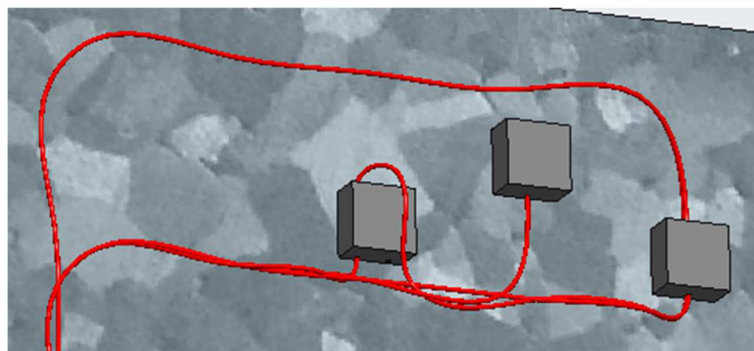



This can be easily edited using existing PTC Creo commands.



Select *Applications* ribbon tab > *Engineering* panel >

Select  *Modify Harness*


Left click on the wire/cable you wish to change:

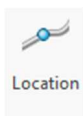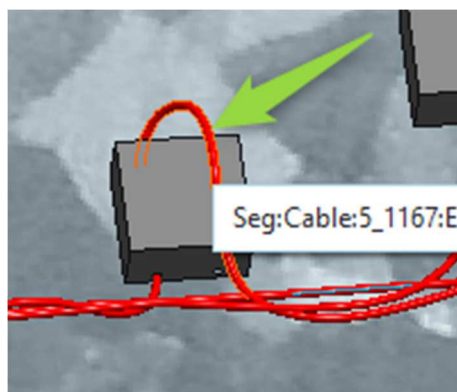


Select




Left click on the wire/cable to add a location node

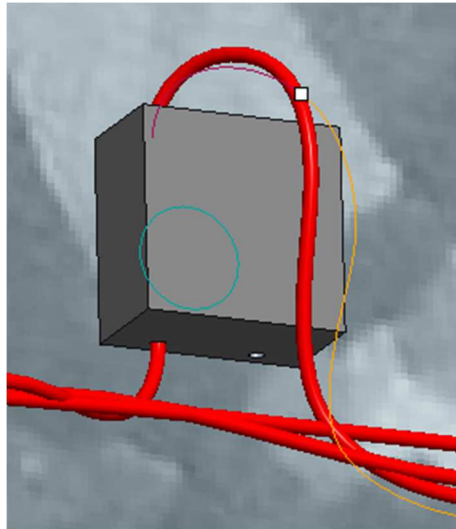

Drag the node to how you would like the wire/cable to bend

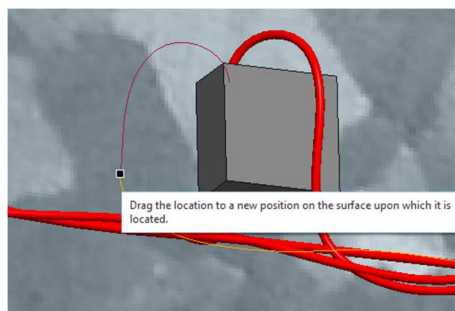

Select to accept the changes

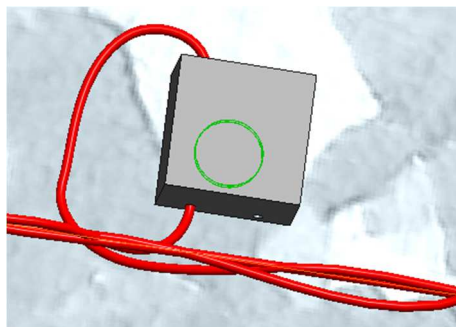

N.B. You can add as many location nodes as deemed required